


Quick Installation Guide

Cloud Easy Smart Gigabit PoE Switch

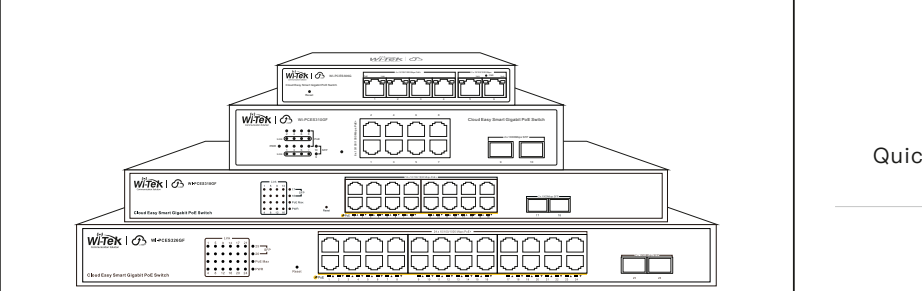

WI-PCES306G | WI-PCES310GF | WI-PCES318GF | WI-PCES326GF
Hardware Version: V2


www.wireless-tek.com

1. Package Contents

- WI-PCES306G



Switch x 1

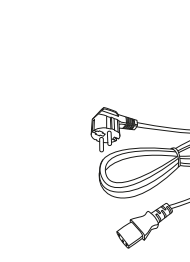

Quick Installation Guide x 1



Power Cord x 1

 


Mats x 4


- WI-PCES310GF, WI-PCES318GF, WI-PCES326GF




Switch x 1



Quick Installation Guide x 1

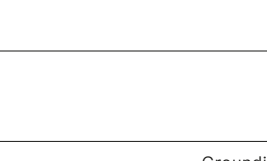

Power Cord x 1

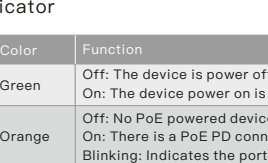


Mounting Accessories
(Hook x 2, Mats x 4, Screw x 8)

2. Appearance Overview

- For WI-PCES306G

- Front Panel

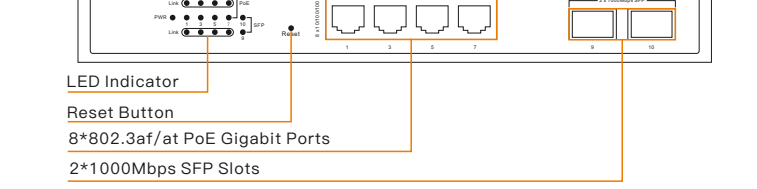

- Back panel




- LED Indicator


LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the switch is actively sending or receiving data over that port.

- For WI-PCES310GF

- Front Panel

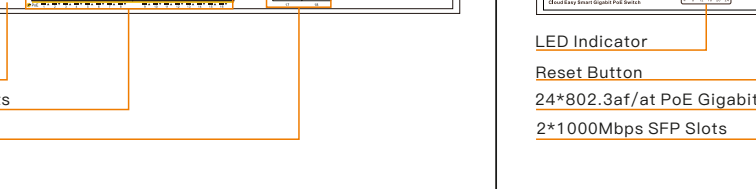

- Back panel

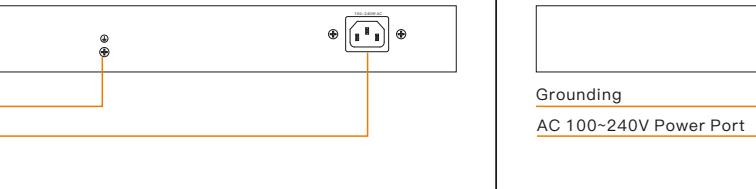


- LED Indicator


LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
SFP	Green	On: Port connected Off: Port disconnected. Blinking: Data transmission
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
PoE Max	Green	Off: PoE output power is less than 80% of the total power. On: PoE output power is greater than or equal to 80% of the total power.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port.

- For WI-PCES318GF

- Front Panel

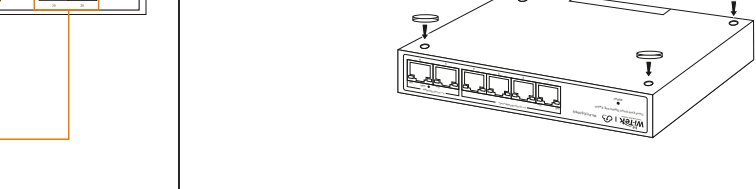

- Back panel

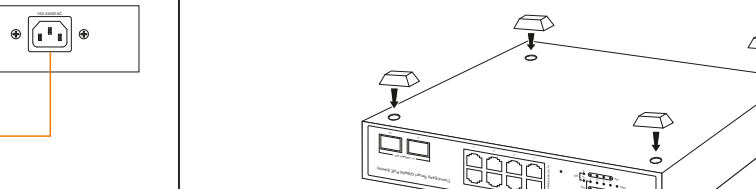


- LED Indicator


LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
SFP	Green	On: Port connected Off: Port disconnected. Blinking: Data transmission
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
PoE Max	Green	Off: PoE output power is less than 80% of the total power. On: PoE output power is greater than or equal to 80% of the total power.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port.

- For WI-PCES326GF

- Front Panel

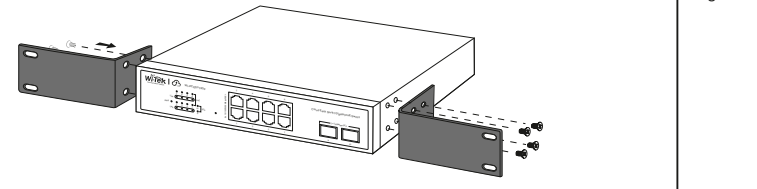

- Back panel

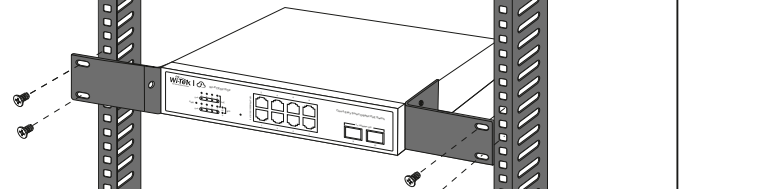


- LED Indicator

LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
SFP	Green	On: Port connected Off: Port disconnected. Blinking: Data transmission
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
PoE Max	Green	Off: PoE output power is less than 80% of the total power. On: PoE output power is greater than or equal to 80% of the total power.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port.

3. Installation

- Desktop Installation (WI-PCES306G)

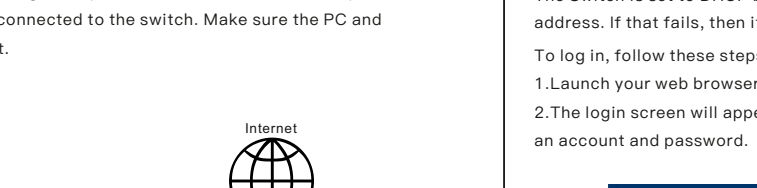


- Desktop Installation (WI-PCES310GF)




- Desktop Installation (WI-PCES318GF)



- Desktop Installation (WI-PCES326GF)

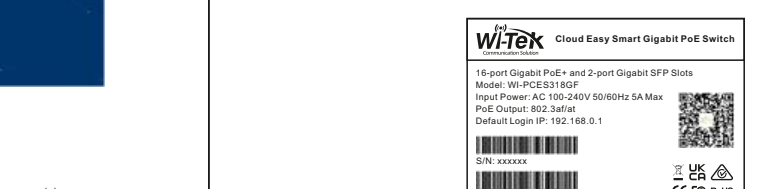


- Rack Mounted (WI-PCES310GF, WI-PCES318GF, WI-PCES326GF)


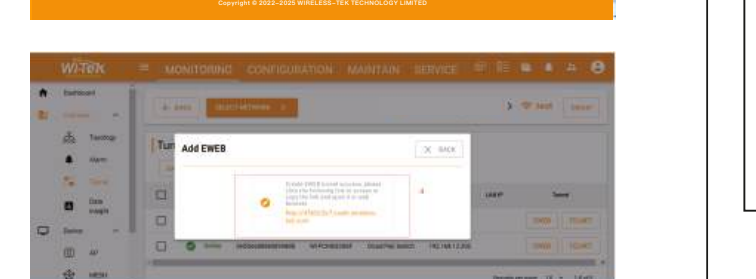


4. Configuration

 - Log in to the switch locally




- Cloud login switch configuration

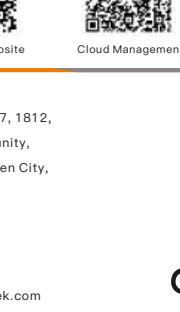
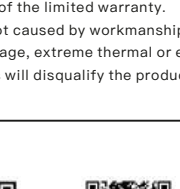


5. Cloud Management

 - 2. Enter the cloud binding switch




- 3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.

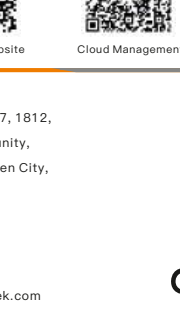
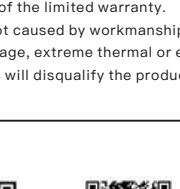


6. Warranty Card

 - Username




- Technical Support

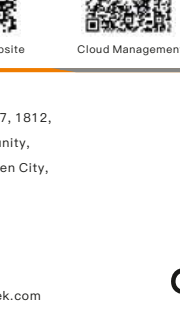
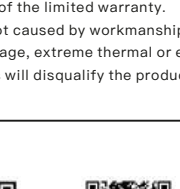


7. Company Information

 - Wireless-Tek Technology Limited




- Address: Building 3, Units 1801-1807, 1812, Huangjiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.

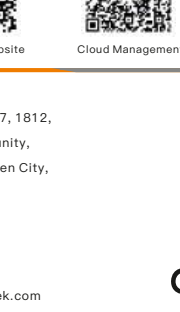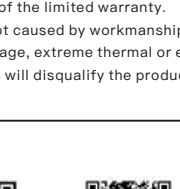

8. Certifications

 - CE



- RoHS

